T-01
User manual

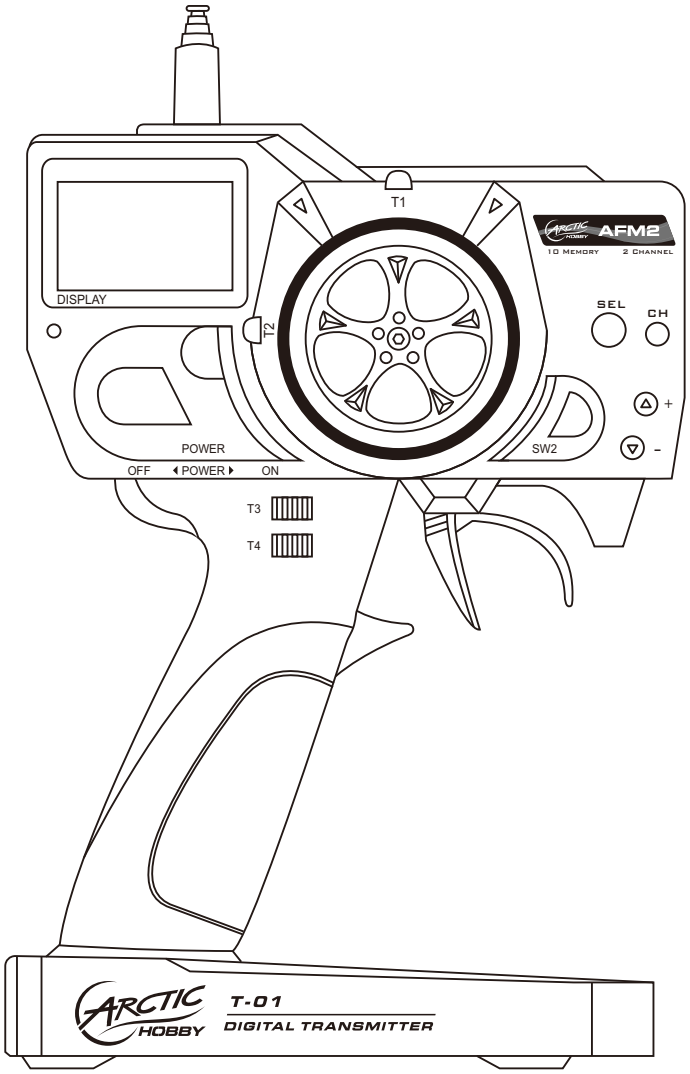

Getting Started

Insert batteries

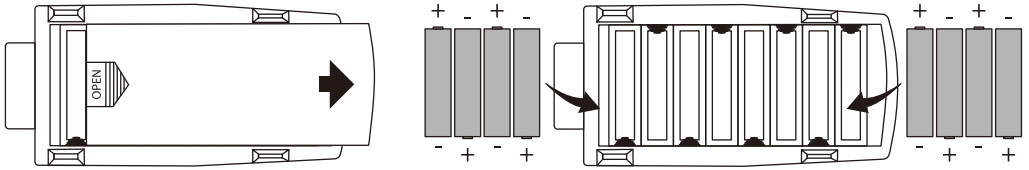

Battery low warning

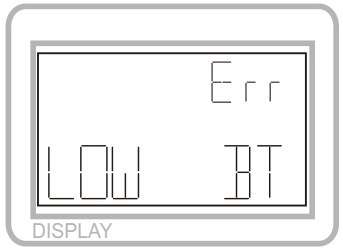

Battery status

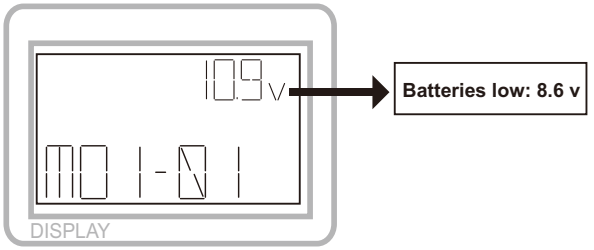

Switch on

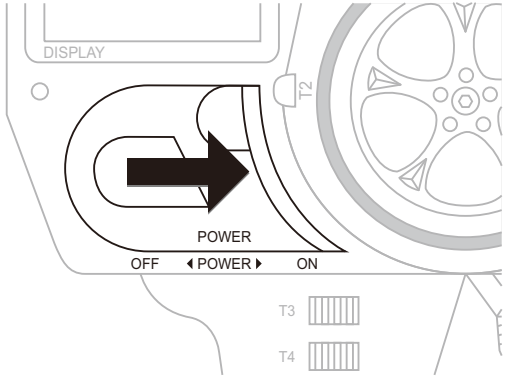

Extend antenna

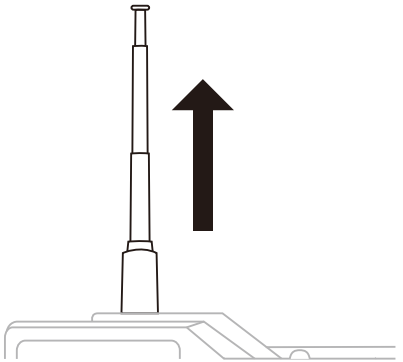

Functions

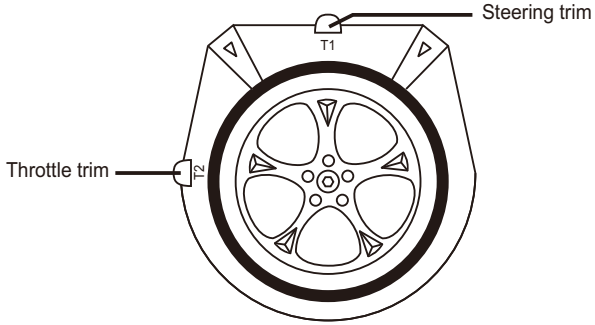

T3 - Steering stop limit: With T3, the turning circle can be reduced or enlarged. For slow driving small turning circles allows precise control, for high speed the opposite setting is recommended.

T4 - Throttle Limiter: Limits the maximum throttle.

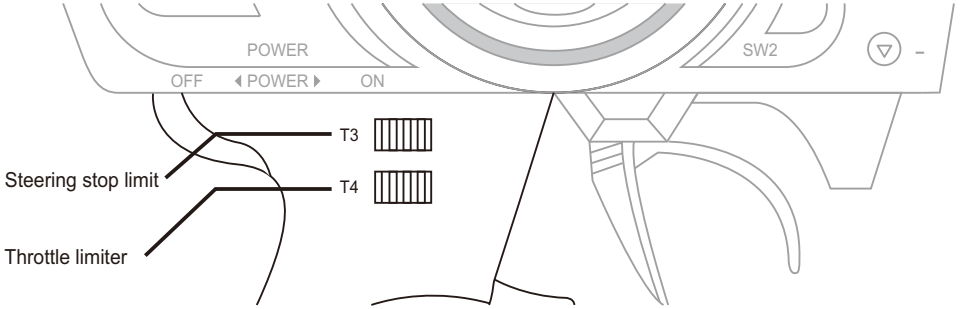

SEL: Select a function (REV, EPA, ABS, EXP or M01…M10 for model creation)
CH : Switch to the functions' details

Use + and – to adjust each function's settings

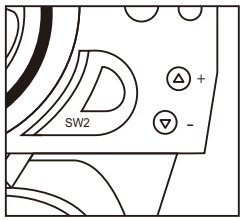

Reset: + & –

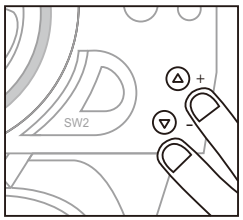

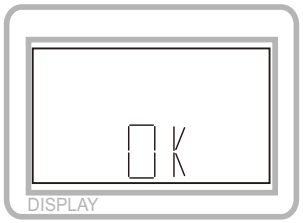

Create or select setup

Choose Model

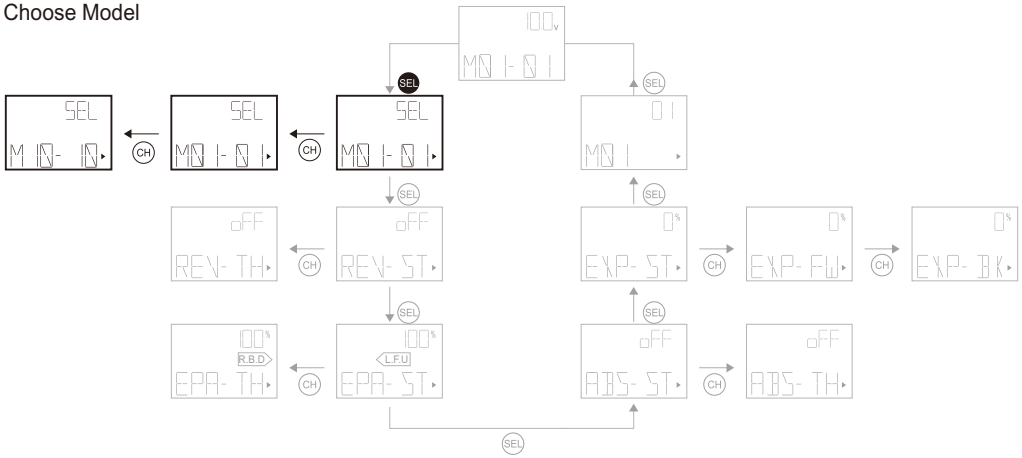

Or select a non defined model:

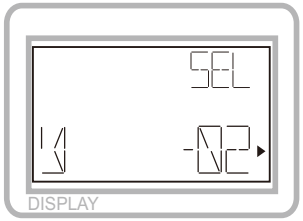

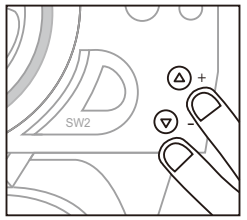

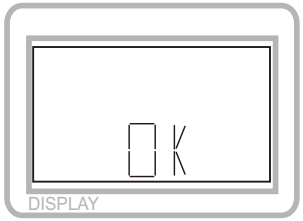

Switch off

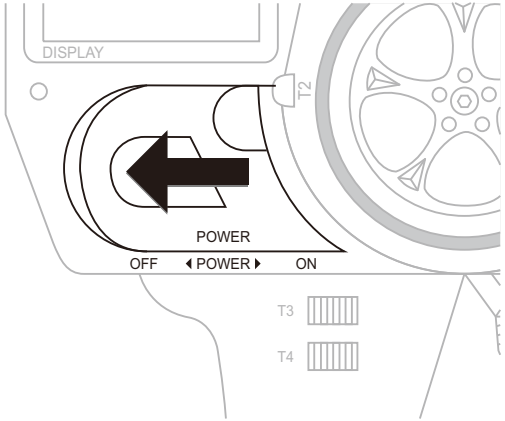

Switch on again

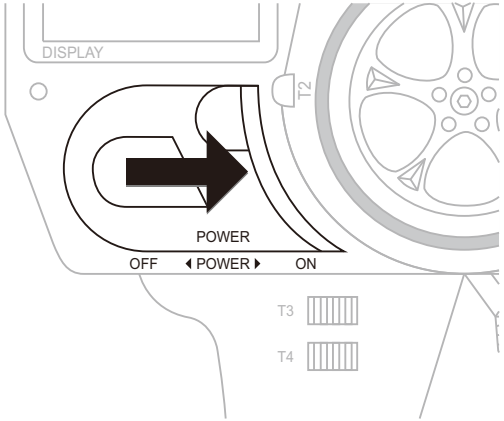

REV: Servo Reverse

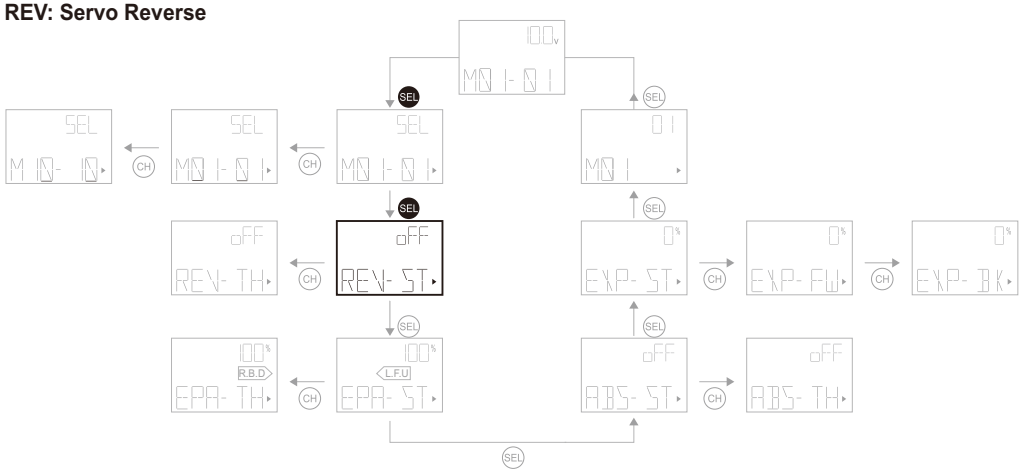

REV-ST off: default

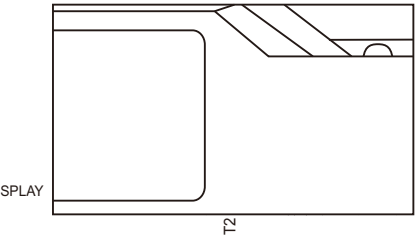

REV-ST on: left will become right

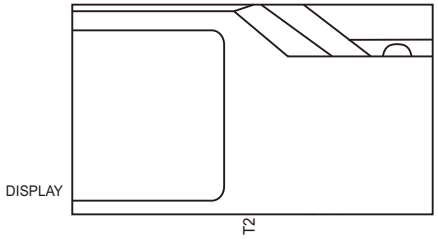

REV-TH off: default

REV-TH on: Reverse Throttle - forward becomes backward

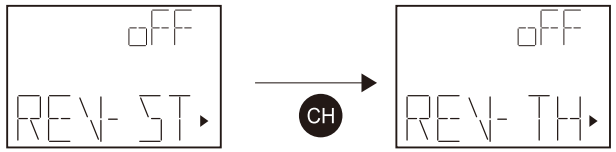

Throttle trigger

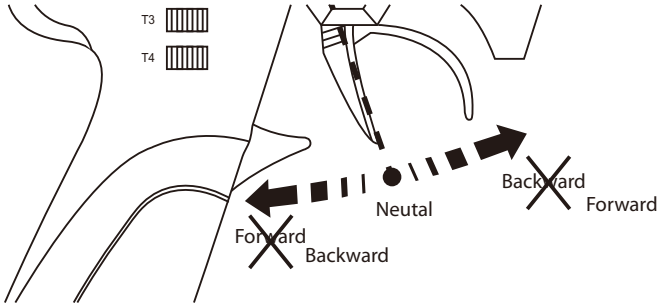

EPA

With the EPA-ST you can adjust left and right steering angles separately.

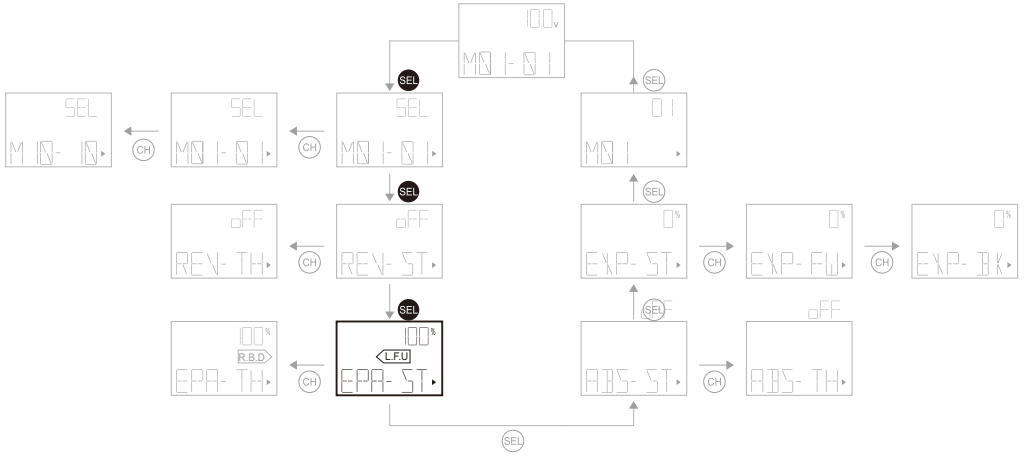

EPA-ST_R.B.D: Steering stop limit right

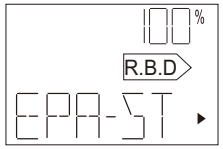

EPA-ST_L.F.U: Steering stop limit left

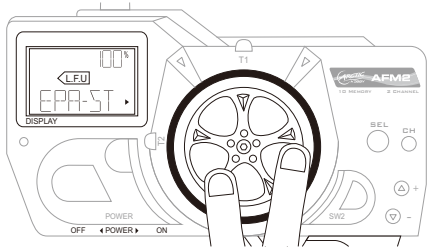

EPA-TH: Throttle limiter (forward/ backward separately)

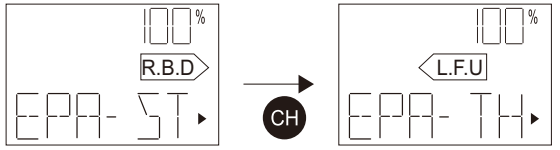

ABS
ABS-TH: Anti-lock Braking System

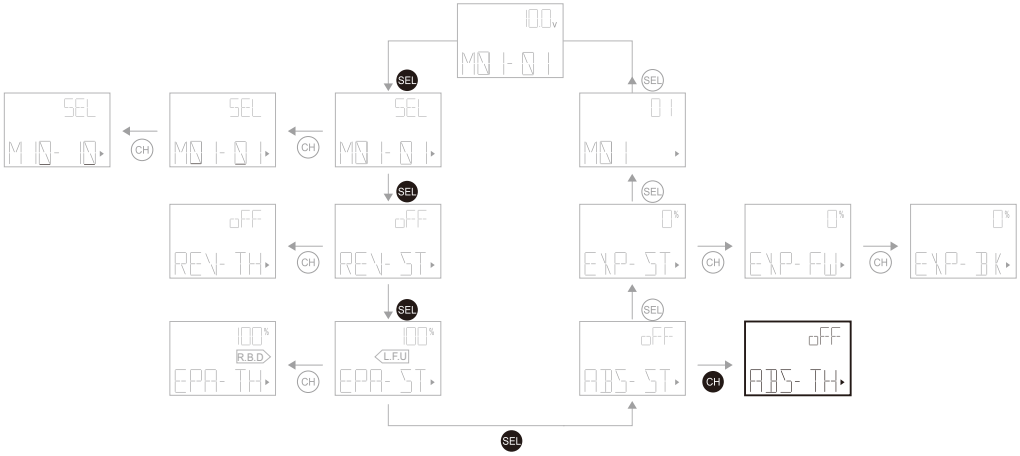

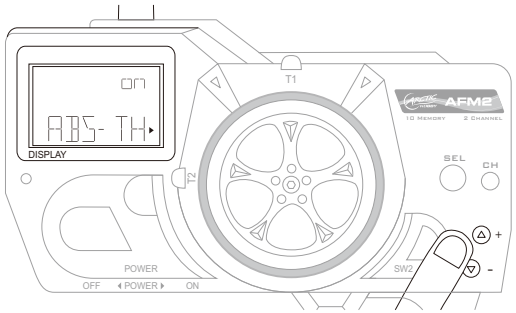

ABS-TH prevents the wheels from locking up or turning backward while braking though backward throttle.

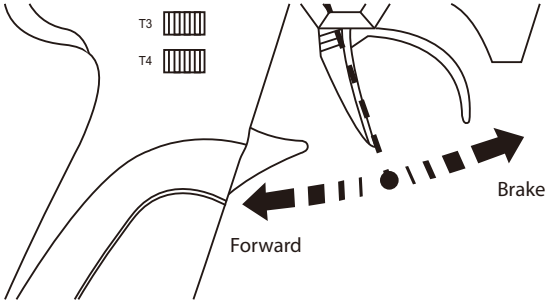

EXP
EXP-ST: Exponential Steering – Steering Sensitivity

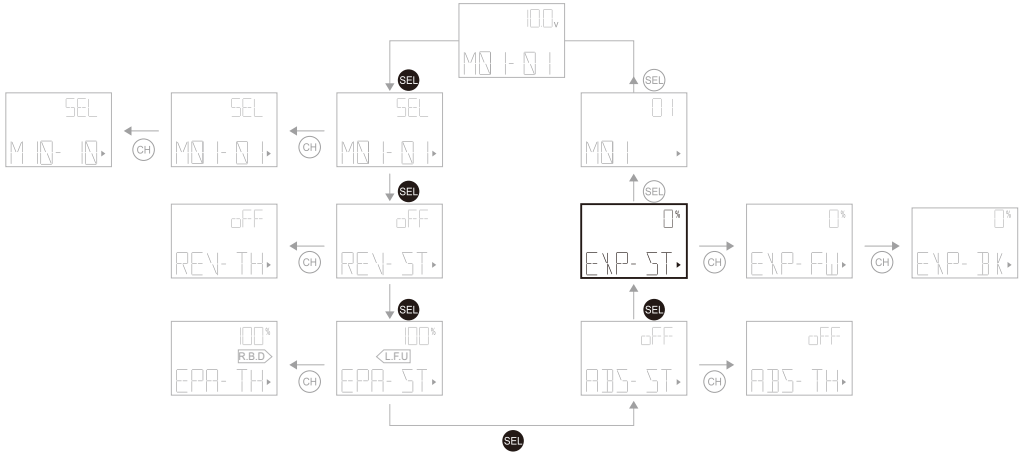

EXP changes the curve between minimum, neutral and maximum scale of the trigger.

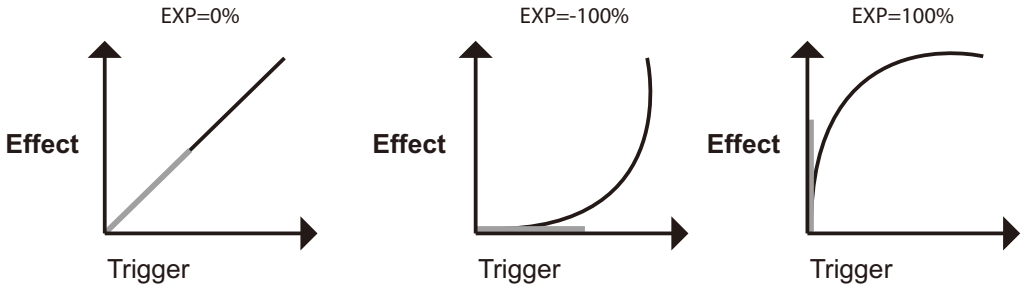

EXP-FW: Exponential forward

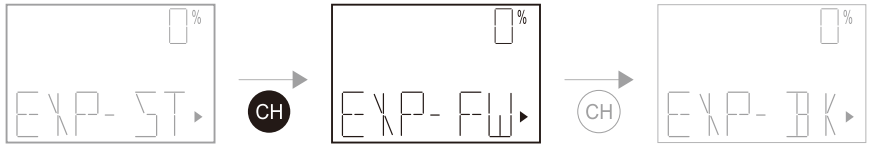

EXP-BK: Exponential backward

If the characteristics of your model are unclear, keep all values at 0%.

Name your setup

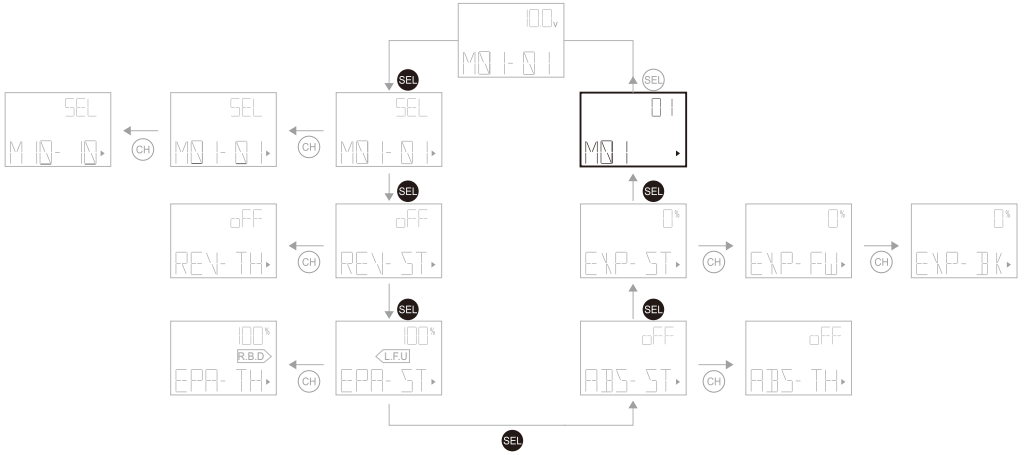

Move the cursor (blinking) by using the ch-button to the letter you want to change.
Change the character by using (+) or (-) button.

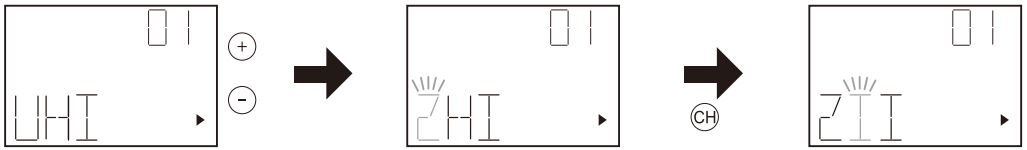

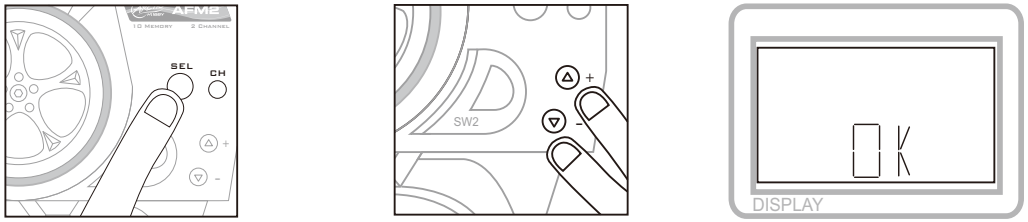

Switch off

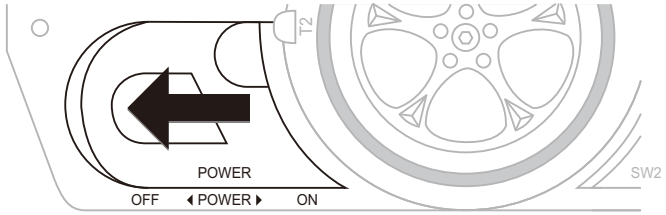

Name configuration finished. The initial screen starts at your last chosen model.

Miscellaneous

The socket can be used to charge batteries without removing them from the transmitter.
Therefore, you can find soon the ARCTIC HOBBY Charging Station (3 ch) on arctic.ac

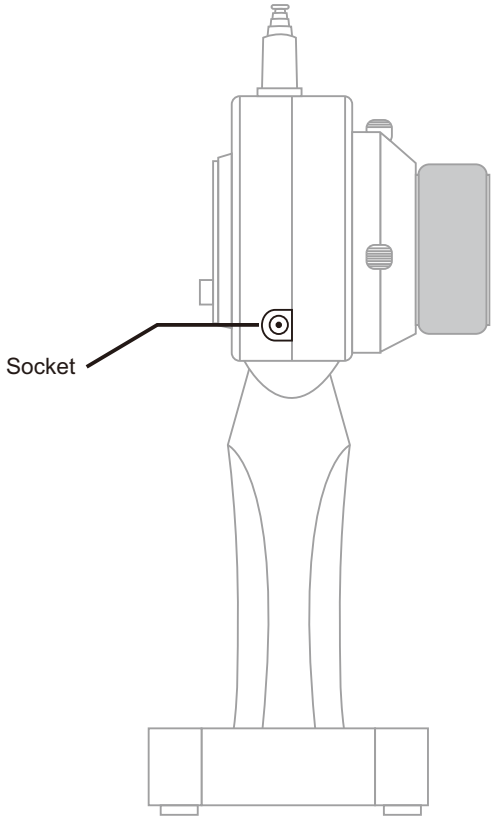

Not for children under 12 years.

For children parental guidance is required.

Warrenty
This ARCTIC Product includes a 2-year limited warranty.

ARCTIC Switzerland
Huobstrasse 4
8808, Pfäffikon, Switzerland
www.arctic.ac

Copyright©
2010 ARCTIC Switzerland. All Rights Reserved.
No part of this manual including the products described in it, may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ARCTIC Switzerland. In no event shall ARCTIC its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.